
## VORTEX TUBES - Dimensional Overview

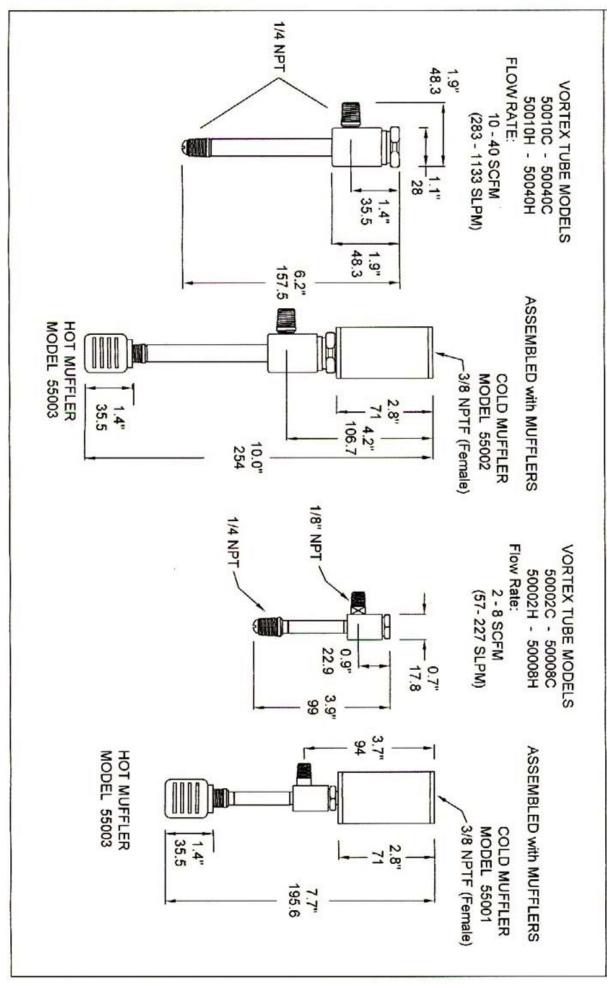


using a mild solvent and clean rag. To prevent contaminants from getting pushed back into the Adjustable Air Amplifier gap, do the cleaning with a small amount of compressed air passing through the unit.

**Troubleshooting** 

With zero moving parts, there is little that can go with an Adjustable Air Amplifier. However, certain factors can cause a reduction in flow or force and thereby reducing the performance of the unit. If the force or flow seems to be below normal, install a pressure gage near the inlet of the Adjustable Air Amplifier. If the pressure is low, it may be due to undersized airlines, perhaps restrictive fittings, or from clogged filter elements. These things should be checked, in particular the fittings used and the filter elements.

If you have any questions or problems, please contact:

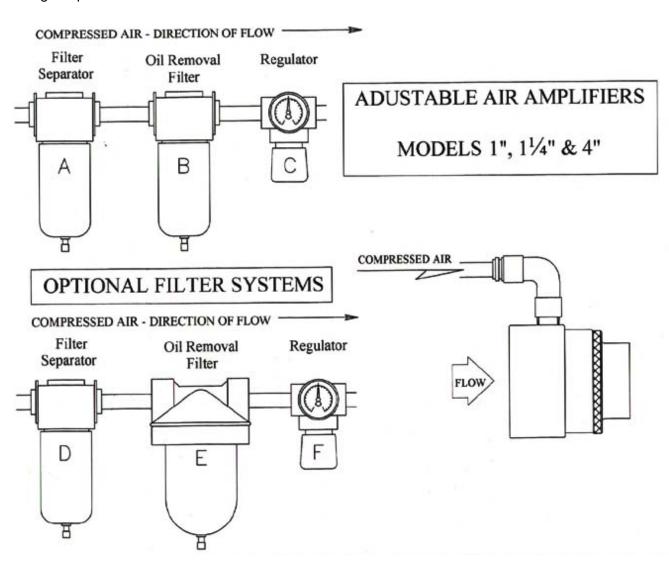



USA & CANADA Tel: (877) 797-2777 Fax: (877) 797-2660 INTERNATIONAL Tel: (416) 410-1313 Fax: (416) 410-1806 INTERNET www.nex-flow.com sales@nex-flow.com